



Board

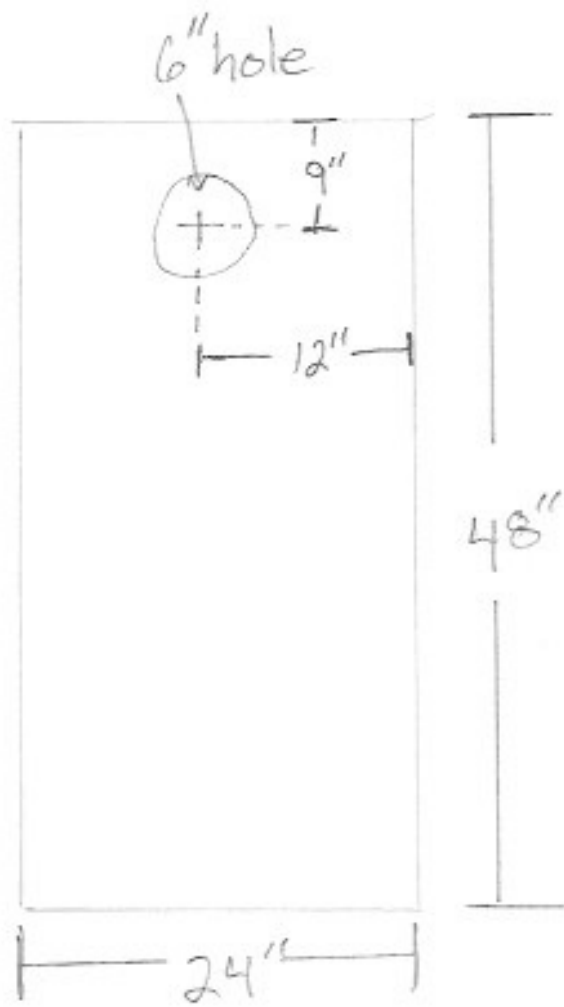



side view




middle brace

x = pocket screws

Frame

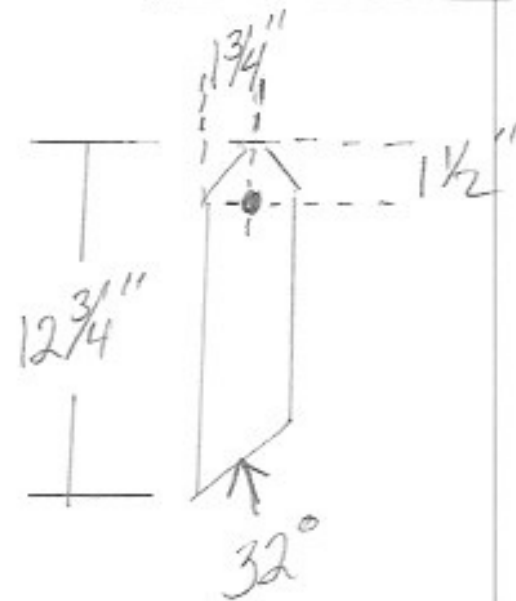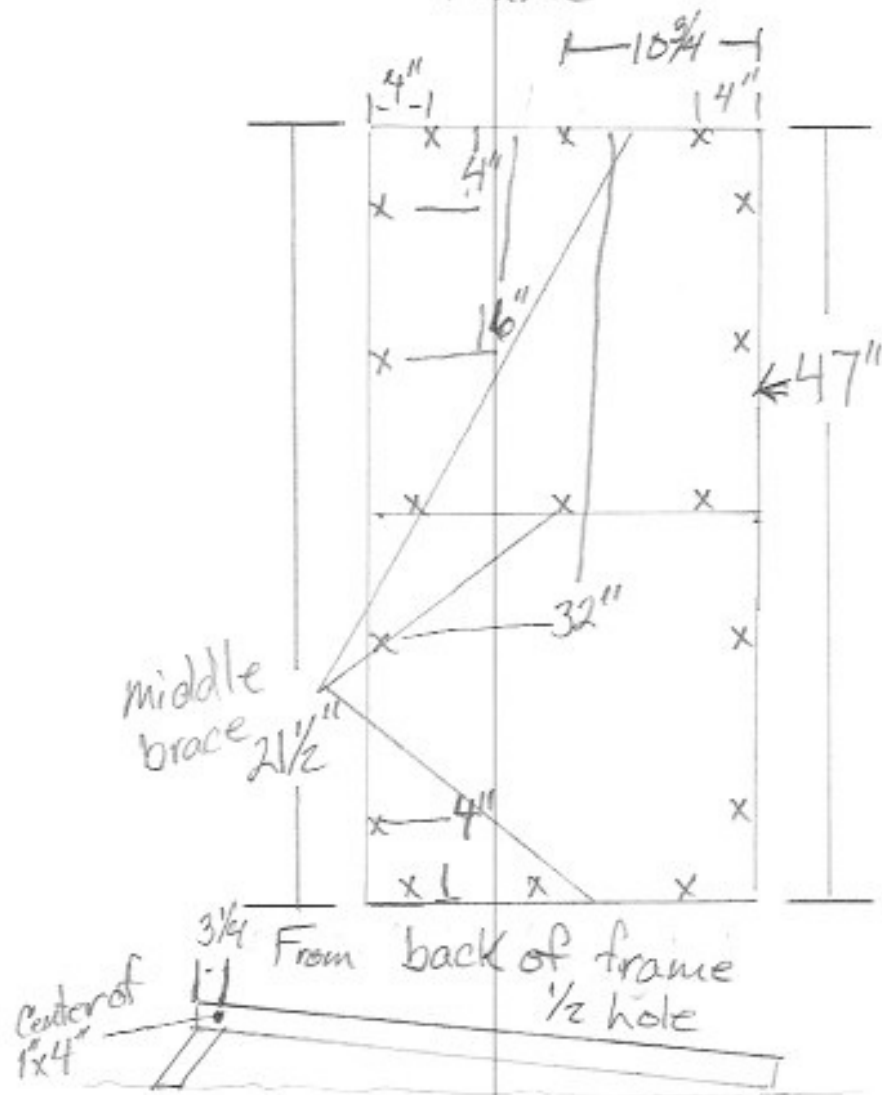

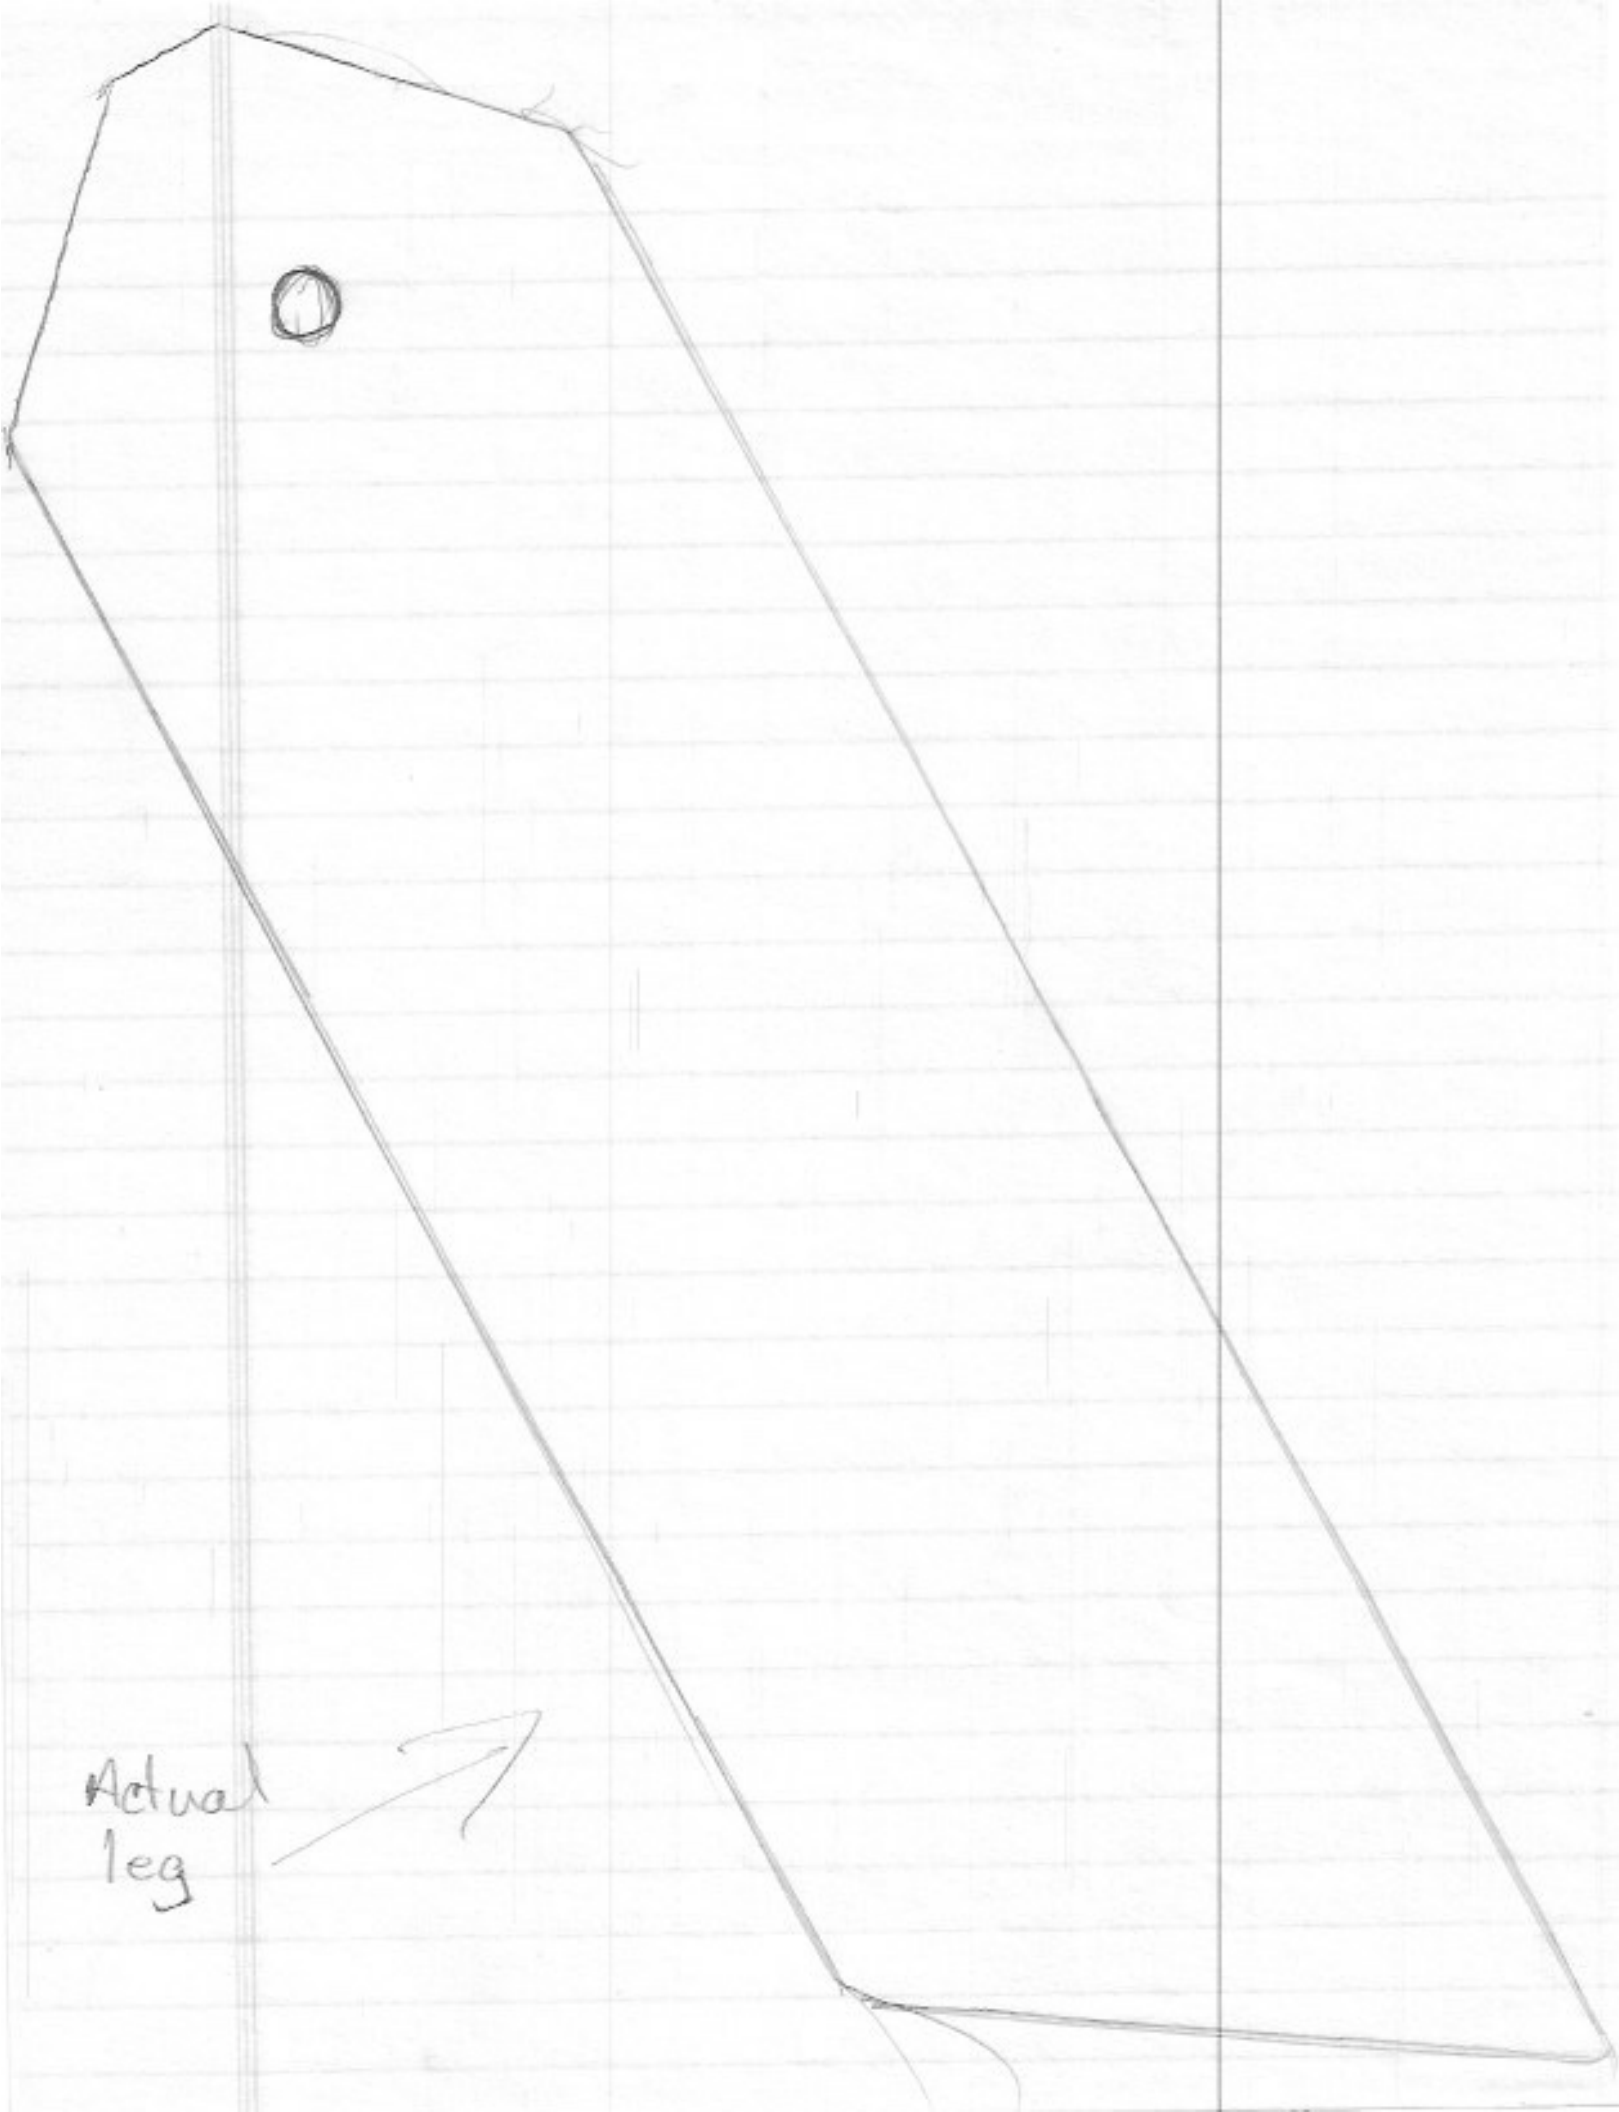

Actual
leg